



## TT RGB PLUS

**\* Please refer to the product webpage for compatible controllers**

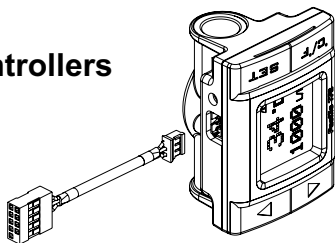

Connect the signal cable to the TF2

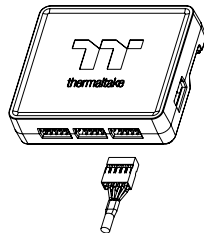

Connect the signal cable to the TT RGB Plus controller

## TT RGB Plus Software control interface

Please download the software from Thermaltake Official website.

[www.thermaltake.com/home.aspx](http://www.thermaltake.com/home.aspx)

and search "TT RGB Plus" on the official website.

OS compatibility: Windows 7 / 8 / 8.1 / 10

When you open the software, choose the "TF2" in the drop-down list(A) first.

### Software User Interface

